



4recon.com

# Quick Guide

## DLC Covert Shoot Ca 3.0

1	Put in 4 pcs. AA alkaline batteries	
1,1	Check your camera is on OFF	You will destroy your sd card if your cam is ON
1,2	Put in your SD Card	You can use up to 8 GB sd card
	<b>You are ready to set up your DLC shoot</b>	
1.	Put in your remote and turn cam on	
2	Your cam starts up and show Covert in Your Display	
3	Mode	Choose between movie / Photo.
4	Press OK and then press Arrow Down	
5	Format	Formate your sd card
7	Press OK and then press Arrow Down	
	Photo Size	Choose between 3 eller 5 MP photo
	Press OK and then press Arrow Down	
8	Video Size	Movie size choose between 640x480 / 320x240
9	Press OK and then press Arrow Down	
10	Date and Time Set	Set the date and time so your camera
11	Press OK and then press Arrow Down	
12	Photo Burst	Set from 1 to 3 photo when activated.
13.	Press OK and then press Arrow Down	
14	Video Length	Set the lenght on your movie 1 to 60 second..
15	Press OK and then press Arrow Down	
16	Sensitivity	Sensor sensitivity Choose: Low – Normal - High
17	Press OK and then press Arrow Down	
18	Pir Interval	Sleep time after your camera have bin activeted
19	Press OK and then press Arrow Down	
20	Time Stamp	Time stamp on photo Choose on or off
21	Press OK and then press Arrow Down	
22	Timer Switch	Survalience you decide when cam is awake and active

	<b>Press OK and then press Arrow Down</b>	
<b>23</b>	<b>Default set</b>	If you press OK, your cam is back 2 product settings

Your cam is now set up and ready to go, just jump into your car and drive to your hunting grounds, put your camera on a tree and turn on.

**Need Support or Help Contact :**  
**support@recon.com**

**Reseller in Europe contact :**  
**sales@4recon.com**

