



4recon.com

Quick Guide

DLC Covert Extreme *Whit TimeLaps*

1.	Put in 8 AA battery	
2.	Check your camera is OFF	You can destroy your sd card if the camera isen't OFF
3.	Put in your SD Card	<u>You can use up to 8 GB sd Cards .</u>
1.	Pull the switch to test	In the middle og the switch
2	Camera starts up whit Covert in display	
3.	You choose menu on your cam	
4.	Mode	Choose photo or movie
5.	Press OK and then Arrow Down	
6.	Format	Format your sd card
	Press OK and then Arrow Down	
7.	Photo Size	Photo size 3 and 5 MP photo.
8.	Press OK and then Arrow Down	
9.	Video Size	Video size 640x480 / 320x240
10.	Press OK and then Arrow Down	
11.	Set Clock	Setup clock and date
	Press OK and then Arrow Down	
12	Photo Burst	Setup from 1 to 3 photos.
13.	Press OK and then Arrow Down	
13.1	Video Length	Setup the lenght on video from 1 til 60 sec.
13.2	Press OK and then Arrow Down	
13.3	Sensitivity	Here you set the sensitivity Choose between : Low – Normal - High
14	Press OK and then Arrow Down	
15.	Pir Interval	Sleep time after activated setup from 1 sek til 60 min.
16	Press OK and then Arrow Down	
17	Timer Interval	Interval when you use TimeLaps Mode
	Press OK and then Arrow Down	

18	Timer Switch	Setup TimeLaps function on or off.
19	Press OK and then Arrow Down	
20	Flash Range	Setup flash range on ir light, from 8 and 15 meters.
21	Press OK and then Arrow Down	
22	Time Stamp	Timestamp on your photo Choose on / off
23	Press OK and then Arrow Down	
24	Default set	If you press ok you are back to producent settings

Need Support or Help Contact :
support@recon.com

Reseller in Europe contact :
sales@4recon.com

